


Ford Transit Custom 2012


M2350P

kit 4 supporti-appoggi per montaggio su:
cod. 10721 PROFESSIONAL 2 barre cm 160



2 coppie

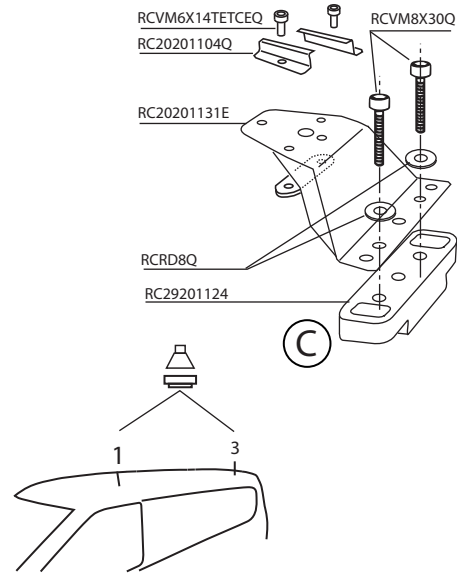



PROFESSIONAL

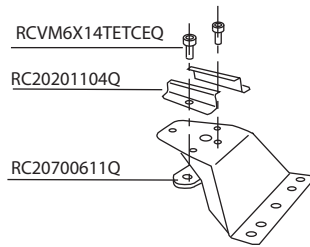

Saml stænger og fødder, som vist på fig. A

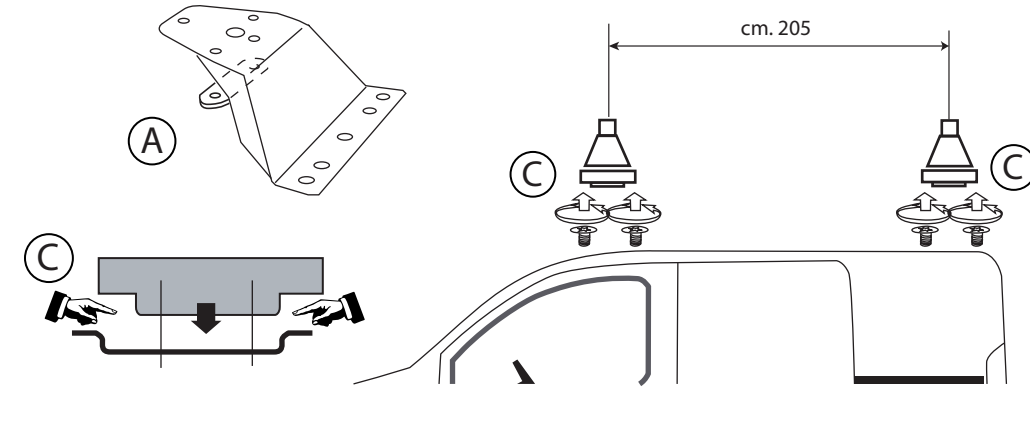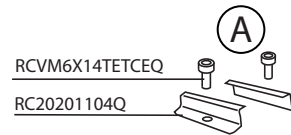

Afmonter relevante bolte fra taget, og monter lastholderne.

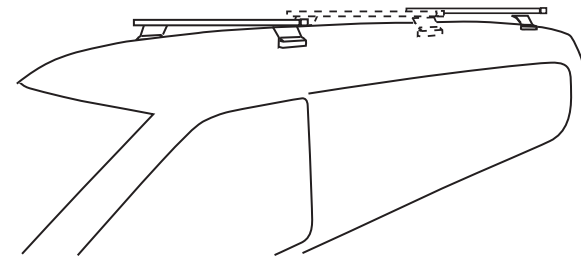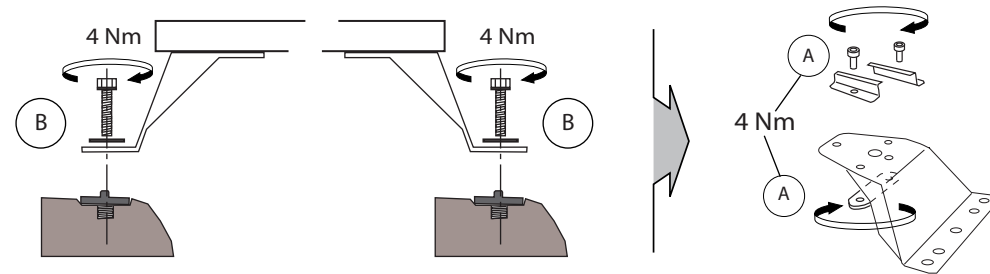

SATEX
Special Auto Trading A/S
www.satex.dk

Special Auto Trading A/S
Bybjergvej 13
3060 Espergårde
Telf.: 49 17 60 60
www.satex.dk

M2350P 12/12/2012
Rev. 0

www.laprealpina.dk